


ERSATZTEILLISTE LASERLINE 6

SPARE PARTS LIST LASERLINE 6

ZEICHNUNG 1 - OBERE EINHEIT (1/2) (FIGURE 1 - UPPER UNIT, 1/2)

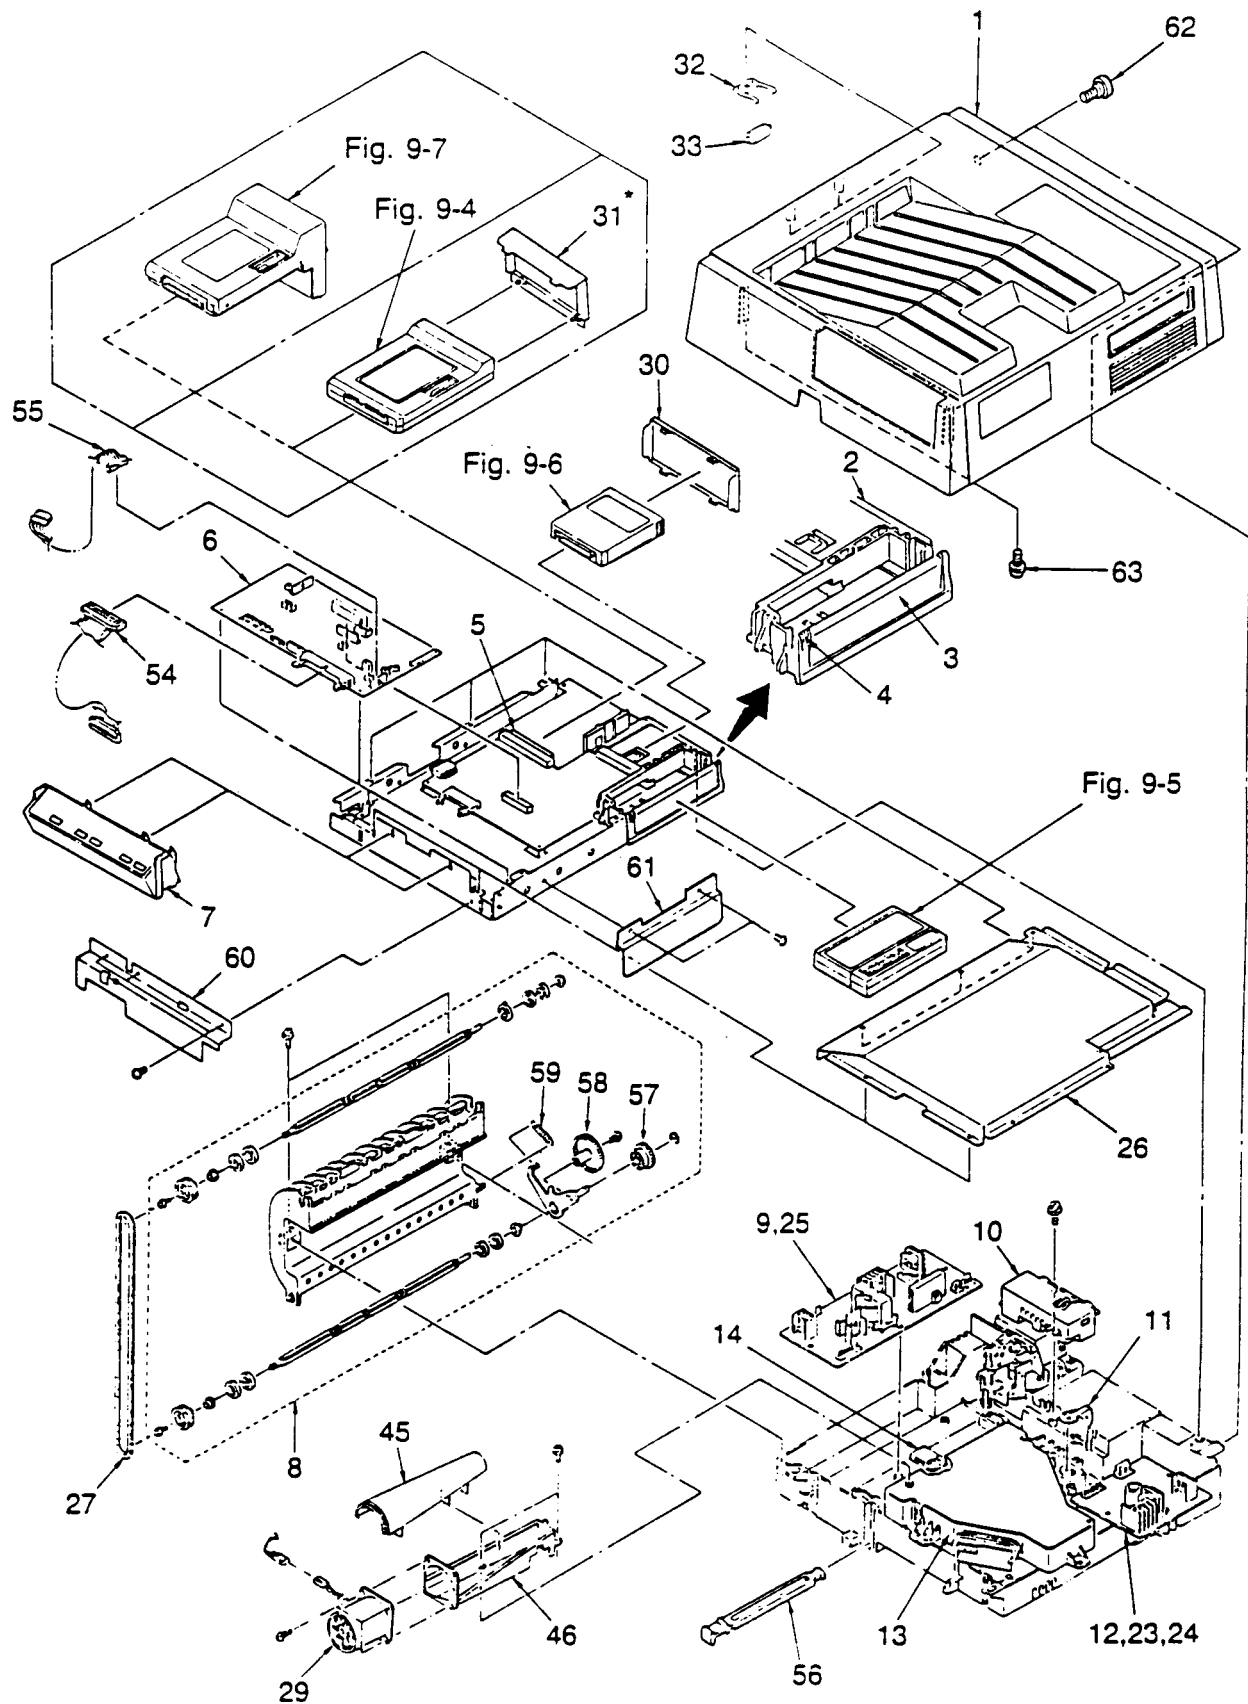

ZEICHNUNG 1 - OBERE EINHEIT (2/2) (FIGURE 1 - UPPER UNIT, 2/2)

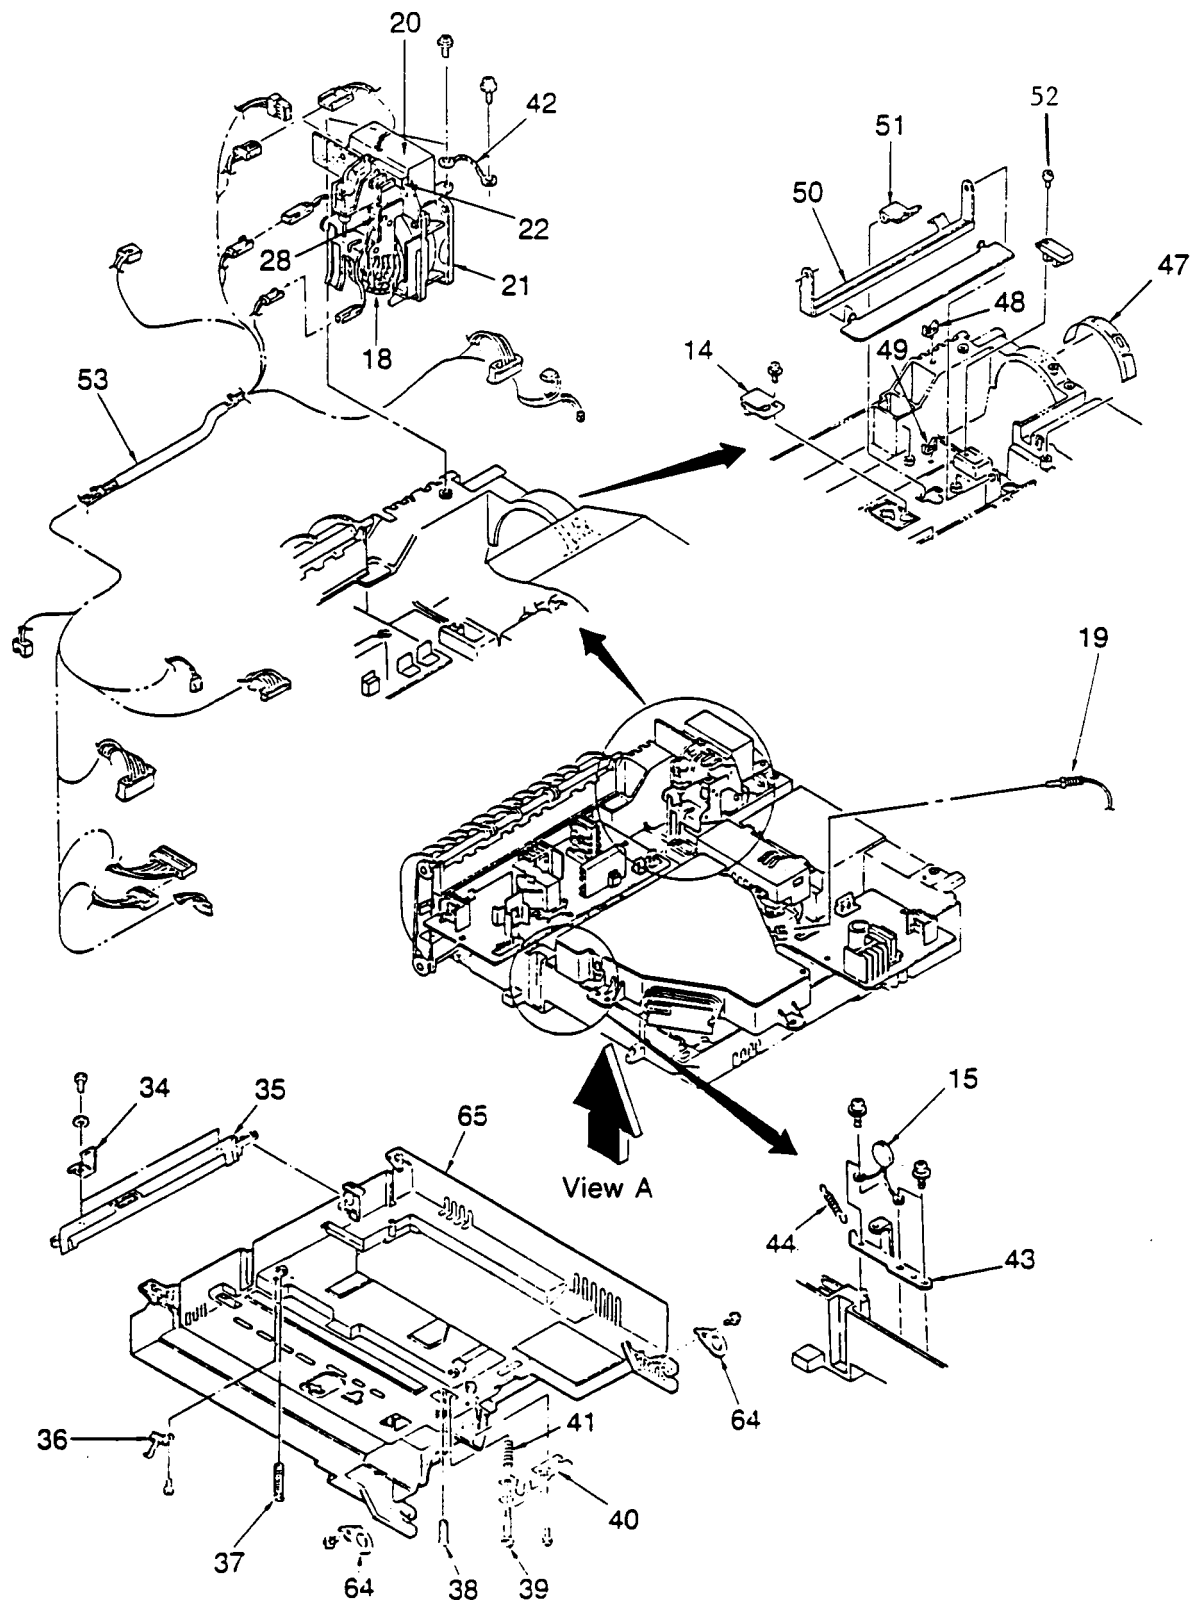

LISTE 1 - OBERE EINHEIT (TABLE 1 - UPPER UNIT)


NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO	BEMERKUNG REMARK
1	UPPER COVER ASSY	3PA4047-3213G2	
2	CARTRIDGE GUIDE	2PP4047-3006P1	
3	BLIND COVER	3PP4047-3007P1	
4	TORSION SPRING	4PP4047-3008P1	
5	CONTROLLER PCB (LBPX-2)	4YA4078-1002G2	PLUS
	CONTROLLER PCB (LBPY)	4YA4046-1275G1	ELITE
6	ENGINE DRIVER PCB	4YA4047-3098P1	
7	CONTROL PANEL ASSY	3YX4047-3021G2	
8	PAPER DELIVERY UNIT	4PB4047-3100P1	
9	POWER SUPPLY UNIT FOR ENGINE (200V)	4YA4047-3096P2	
10	HIGH VOLTAGE POWER UNIT (CH, DB)	4YA4047-3093P1	
11	TONER END SENSOR ASSY	4PB4047-3099P1	
12	POWER SUPPLY UNIT FOR CONTROLLER (200V)	4YA4047-3097P2	
13	OPTICAL HOUSING UNIT	4YA4047-3101P1	
14	TONER OVERFLOW SENSOR	4PB4047-3095P1	
15	VARIABLE RESISTOR 650V, 0.2 W	4PB4047-3135P1	
18	OZONE FILTER	4PB4047-3092P1	
19	OPTICAL FIBER	4PB4047-3102P1	
20	OPC COUNTER	4PB4047-3138P1	
21	FAN COOLING	4PB4047-3094P1	
22	SENSOR (LATCH RELAY, OPC TYPE)	4PB4047-3139P1	
23	FUSE 125V, 2A	4PB4047-3173P1	
	FUSE 250V, 1A CONTROL PCB POW	4PB4047-3173P2	
24	FUSE 125V, 1A	4PB4047-3173P1	
25	FUSE 125V, 8A	4PB4047-3177P1	
	FUSE 250V, 5A ENGINE PCB POW	4PB4047-3177P2	
26	SHIELD COVER	1PP4047-3005P1	
27	BELT, PAPER EXIT	4PB4047-3183P1	
28	LATCH RELAY	4PB4047-3180P1	
29	FAN OZONE	4PB4047-3186P1	
30	BLIND COVER (RAM)	3PP4047-3009P1	

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO	BEMERKUNG REMARK
31	PER./MOD. COVER	4PA4047-3214G1	*
32	RETAILER, PAPER EXIT ROLLER	4PB4047-3035P1	
33	ROLLER, PAPER EXIT	4PB4047-3034P1	
* = NR. 31 MOD. COVER WIRD NICHT BEIM 3-PORT INTERFACE BENÖTIGT!			
34	LEAF SPRING, LOCK LEVER	4PB4047-3224P1	
35	LEVER LOCK	4PB4047-3561P1	
36	SPRING, GROUND, GRID	4PB4047-3729P1	
37	SPRING, PRESSURE, DEVELOPMENT UNIT	4PB4047-3563P1	
38	SPRING, PRESSURE, OPC MAGAZINE	4PB4047-3564P1	
39	SCREW, LOCK DEVELOPEMENT UNIT	4PB4047-3571P1	
40	LEAF SPRING, LOCK DEVELOPEMENT UNIT	4PP4047-3569P1	
41	SPRING, LOCK, DEVELOPMENT UNIT	4PB4047-3570P1	
42	WIRE, GROUND, FAN BRACKET	4PB4047-3567P1	
43	PLATE, GROUND	4PB4047-3730P1	
44	SPRING, SHUTTER	4PB4047-3227P1	
45	FRAME	4PB4047-3574P1	
46	DUCT COVER	4PB4047-3573P1	
47	SEAL, FAN BRACKET	4PB4047-3576P1	
48	WIRE SADDLE 1NS	4PB4047-3667P1	
49	WIRE SADDLE 2NS	4PB4047-3667P2	
50	SHUTTER ARM	4PB4047-3225P1	
51	SHUTTER LEVER	4PB4047-3229P1	
52	SOLENOID TYPE SENSOR	4PB4047-3139P1	
53	HARNESS, DC, UPPER UNIT	4PB4047-3247P1	
54	CABLE, FLAT, RELAY	4PB4047-3245P1	
55	HARNESS, L.D. UNIT	4PB4047-3246P1	
56	SHIELD GLASS	4PB4047-3073P1	
57	DRIVE GEAR, PAPER DEL UNIT	4PB4047-3584P1	
58	GEAR, PAPER DELIVERY	4PB4047-3583P1	
59	SPRING, PAPER DELIVERY	4PB4047-3586P1	
60	BRACKET SUPPORT A	3PP4047-3056P1	
61	BRACKET SUPPORT B	4PP4047-3057P1	
62	SCREW, SET	4PP4047-3211P1	
63	SCREW, MACHINE, PAN HEAD	+P(SW+2W)3-8HH	


ERSATZTEILLISTE LASERLINE 6

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO	BEMERKUNG REMARK
64	PLATE, HINGE	4PB4047-3562P1	
65	FRAME, UPPER	4PB4047-3223P1	


ZEICHNUNG 2 - UNTERE EINHEIT (1/3) (FIGURE 2 - LOWER UNIT, 1/3)

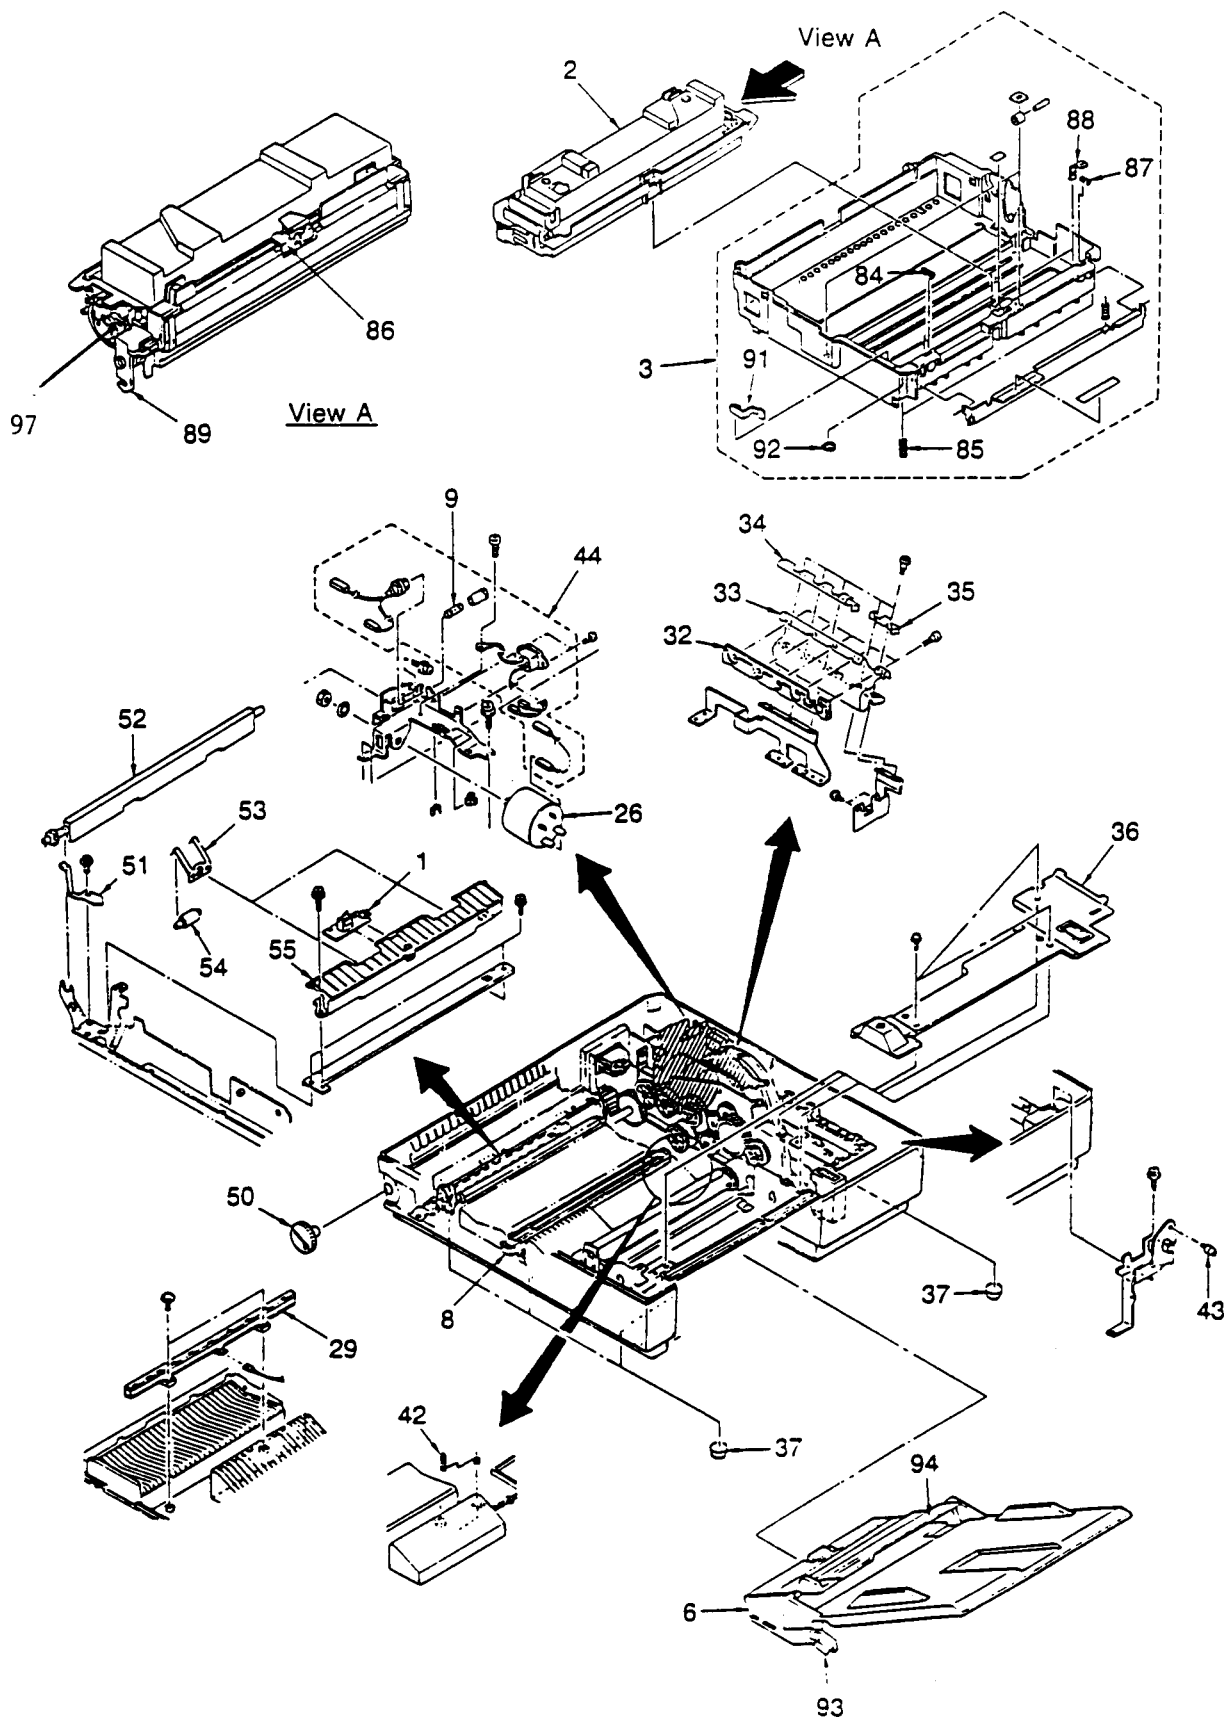

ZEICHNUNG 2 - UNTERE EINHEIT (2/3) (FIGURE 2 - LOWER UNIT, 2/3)

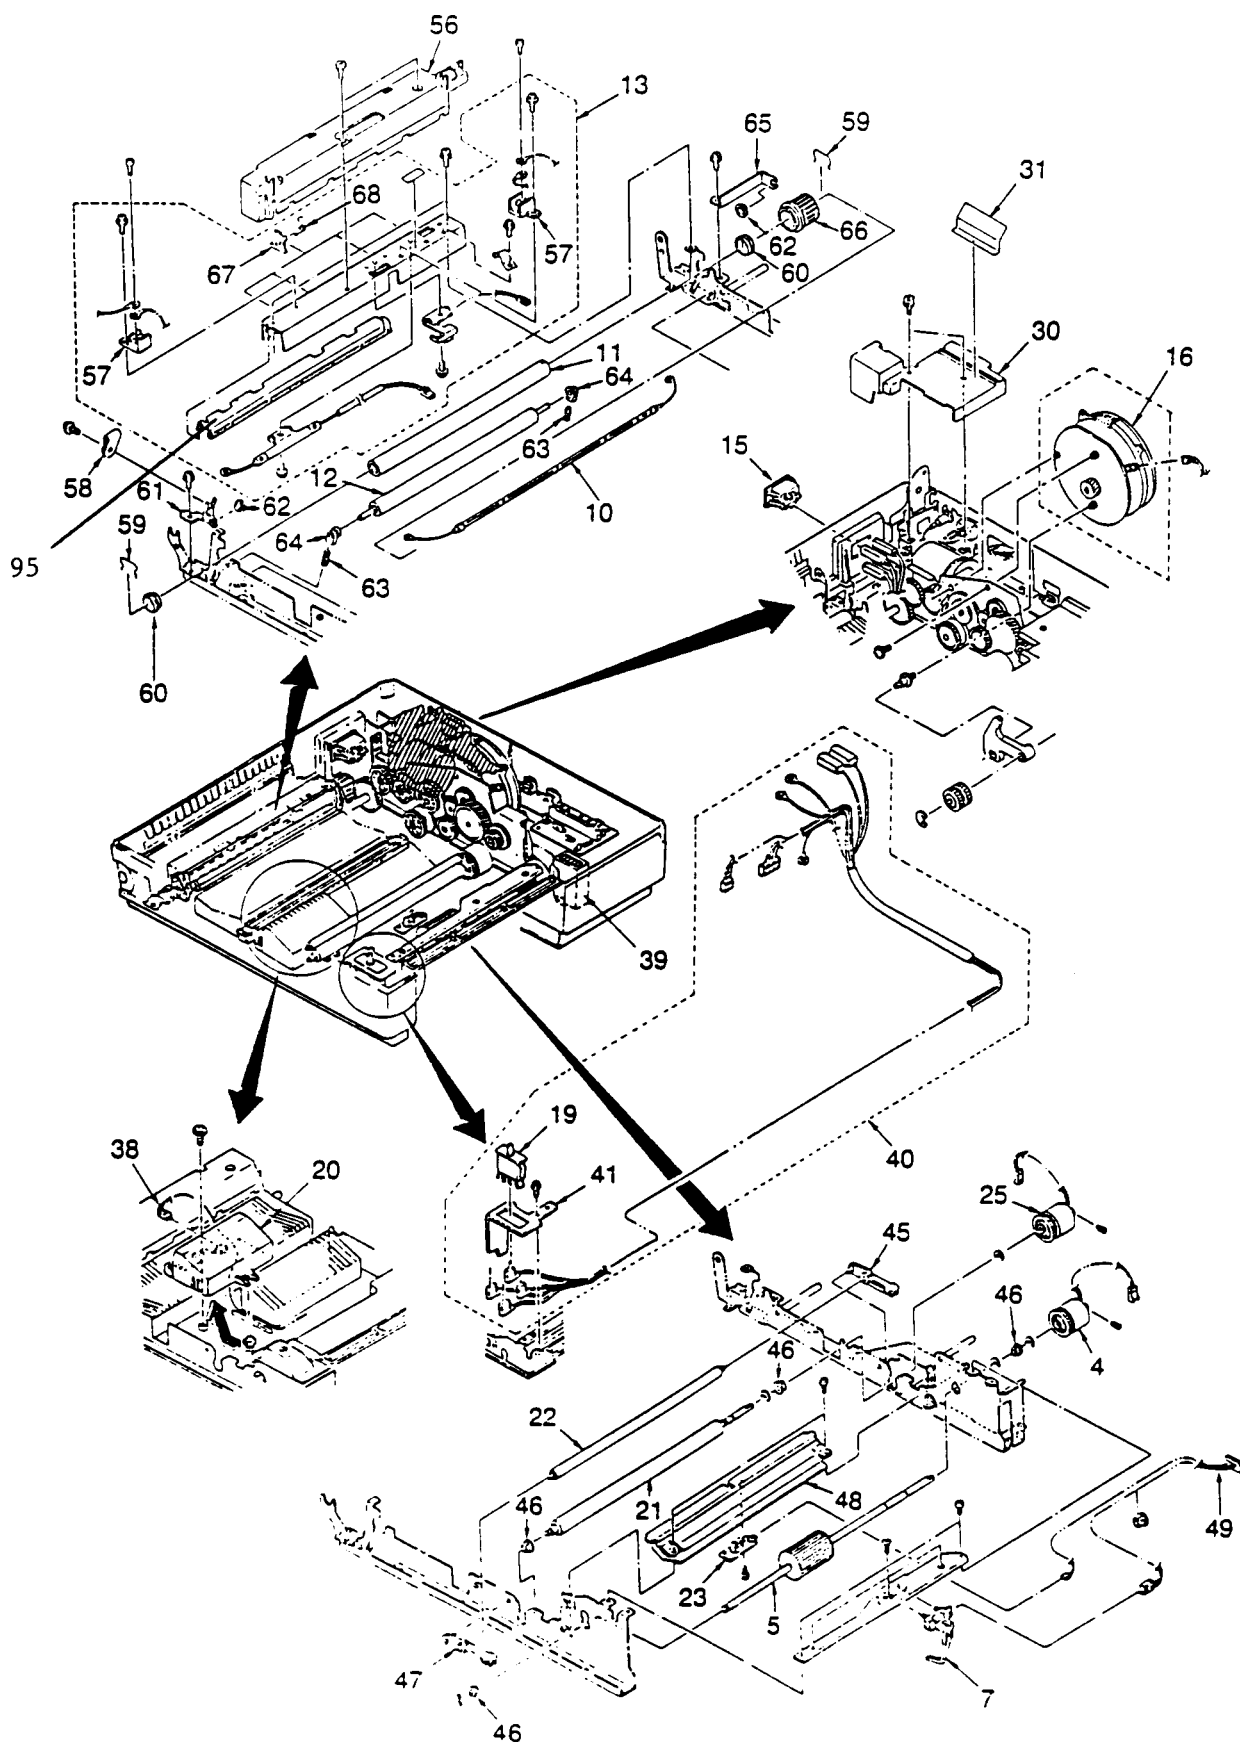

ZEICHNUNG 2 - UNTERE EINHEIT (3/3) (FIGURE 2 - LOWER UNIT, 3/3)

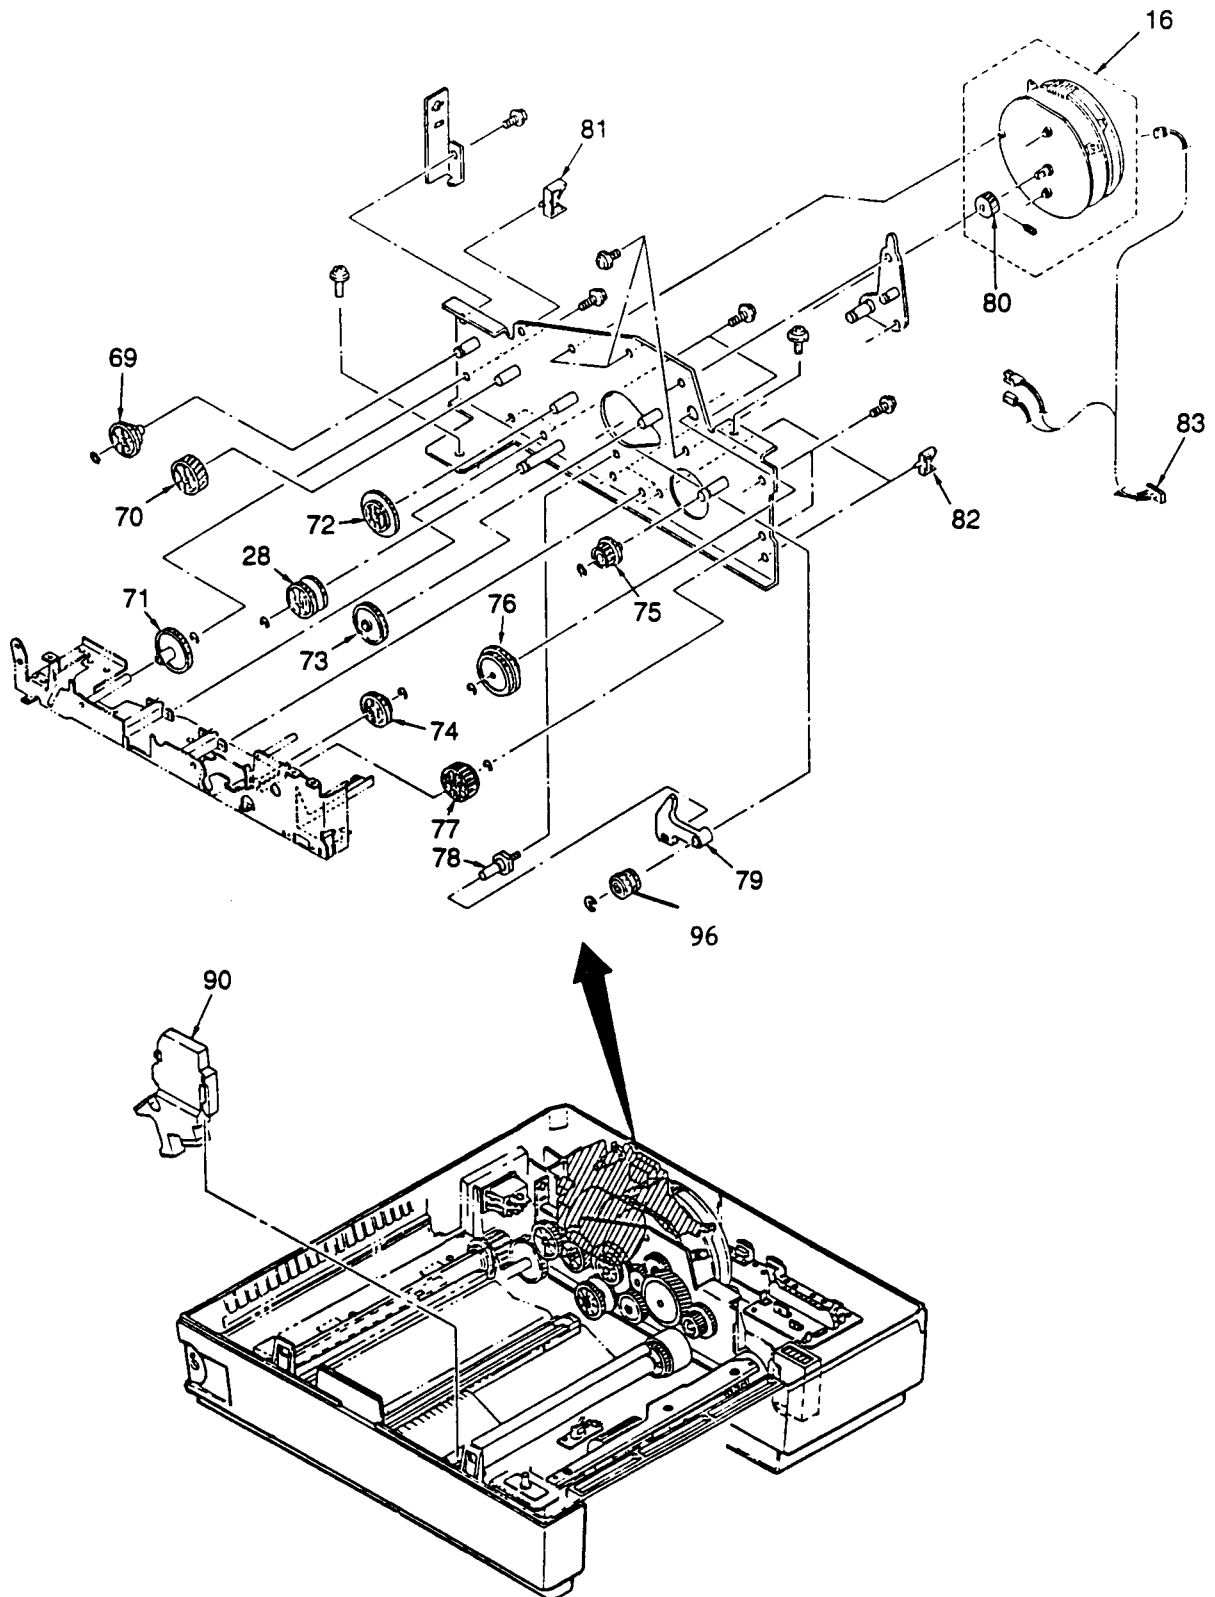

LISTE 2 - UNTERE EINHEIT (TABLE 2 - LOWER UNIT)

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO	BEMERKUNG REMARK
1	PAPER EXIT SENSOR	4PB4047-3111P1	
2	DEVELOPEMENT UNIT	4YA4047-3114P1	
3	PROCESSING UNIT TRAY	4PB4047-3113P1	
4	PAPER FEED CLUTCH	4PB4047-3117P1	
5	FEED ROLLER ASSEMBLY	4PB4047-3121P1	
6	PAPER TRAY ASSEMBLY	4PB4047-3109P1	
7	PAPER END SENSOR	4PB4047-3116P1	
8	TRANSFER CHARGER ASSY	4PB4047-3112P1	
8A	TRANSFER WIRE	4PB4047-3685P1	
9	FUSE (250V 5A)	4PB4047-3104P2	
10	HEATER (400W 230V)	4PB4047-3115P2	
11	FUSING ROLLER	4PB4047-3129P1	
12	PRESSURE ROLLER	4PB4047-3130P1	
13	CABLE ASSEMBLY (TEMP. FUSE, THERMISTOR)	4PB4047-3132P1	
15	POWER SWITCH	4PB4047-3108P1	
16	MAIN MOTOR (W/GEAR)	4PB4047-3123P1	
19	INTERLOCK SWITCH	4PB4047-3106P1	
20	HIGH VOLTAGE POWER UNIT (TRANSFER)	4YA4047-3107G1	
21	TRANSFER ROLLER (LOWER)	4PB4047-3119P1	
22	TRANSFER ROLLER (UPPER)	4PB4047-3120P1	
23	REGISTRATION SENSOR	4PB4047-3122P1	
25	PAPER TRANSPORT CLUTCH	4PB4047-3118P1	
26	NOISE FILTER (200V)	4PB4047-3137P2	
27	DEVELOPEM. UNIT DRIVE GEAR	4PB4047-3181P1	
28	OPC MAGAZINE DRIVE GEAR	4PB4047-3182P1	
29	QUENCHING LAMP	4PB4047-3185P1	
30	AC INLET COVER	4PB4047-3238P1	
31	SEAL, FAN BRACKET, LOWER	4PB4047-3597P1	
32	HOLDER GROUND PLATE CHASSIS	4PB4047-3596P1	
33	PLATE, GROUND, CHASSIS	4PB4047-3594P1	
34	PLATE GROUND, AC INLET	4PB4047-3241P1	
35	PLATE, GROUND, HINGE	4PB4047-3242P1	
36	INTERLOCK COVER	4PB4047-3237P1	
37	FOOT, RUBBER	4PB4047-3236P1	

ERSATZTEILLISTE LASERLINE 6

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO	BEMERKUNG REMARK
38	HARNESS, POWER SUPPLY UNIT TRANSFER	4PB4047-3249P1	
39	TOTAL COUNTER	4PB4047-3105P1	
40	HARNESS ASSY, AC	4PB4047-3592P1	
41	BRACKET, INTERLOCK SWITCH	4PB4047-3593P1	
42	SPRING, GROUND TRANSFER CHARGER	4PB4047-3726P1	
43	STOPPER, UPPER UNIT	4PB4047-3602P1	
44	AC INLET ASSY 200V	4PB4047-3702P1	
45	HOLDER, BEARING, REAR	4PB4047-3707P1	
46	SHAFT BEARING	4PB4047-3705P1	
47	HOLDER, BEARING, FRONT	4PB4047-3706P1	
48	GUIDE PLATE, PAPER SUPPLY	4PB4047-3605P1	
49	HARNESS, PAPER END	4PB4047-3703P1	
50	DIAL, PAPER PASS SELECTOR	4PB4047-3751P1	
51	RETAINER, PAPER PASS SELECTOR	4PB4047-3713P1	
52	GUIDE, PAPER PASS SELECTOR	4PB4047-3712P1	
53	RETAINER, PAPER DELIVERY ROLLER	4PB4047-3618P1	
54	PAPER DELIVERY ROLLER	4PB4047-3710P1	
55	GUIDE, PAPER DELIVERY	4PB4047-3711P1	
56	FIXING COVER	4PB4047-3741P1	
57	TERMINAL, FUSING	4PB4047-3735P1	
58	CLAMP, HIGH TEMPERATURE	4PB4047-3616P1	
59	SPRING, STOPPER	4PB4047-3739P1	
60	BEARING	4PB4047-3611P1	
61	BRACKET, HEATER, FRONT 200V	4PB4047-3740P1	
62	COLLER, HEATER 200V	4PB4047-3617P1	
63	SPRING, PRESSURE ROLLER	4PB4047-3742P1	
64	BUSHING, PRESSURE ROLLER	4PB4047-3732P1	
65	BRACKET HEATER, REAR 200V	4PB4047-3736P1	
66	GEAR, FUSING	4PB4047-3731P1	
67	PAWL, PAPER SEPARATION	4PB4047-3733P1	
68	SPRING, PAPER SEPARATION PAWL	4PB4047-3734P1	
69	GEAR, 24T X 30T	4PB4047-3718P1	
70	GEAR, 36T, LEFT	4PB4047-3717P1	
71	GEAR, 30T	4PB4047-3723P1	
72	GEAR, 48T X 30T	4PB4047-3716P1	
73	GEAR, 36T	4PB4047-3724P1	

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO	BEMERKUNG REMARK
74	GEAR, 21T X 29T	4PB4047-3722P1	
75	GEAR, 36T X 24T	4PB4047-3719P1	
76	GEAR, 30T X 48T X 43T	4PB4047-3725P1	
77	GEAR, 22T X 30T	4PB4047-3720P1	
78	POST	4PB4047-3608P1	
79	LOCK LEVER	4PB4047-3609P1	
80	GEAR, MAIN MOTOR	4PB4047-3721P1	
81	WIRE SADDLE 1NS	4PB4047-3667P1	
82	WIRE SADDLE	4PB4047-3669P1	
83	HARNESS, MAIN MOTOR	4PB4047-3701P1	
84	SPRING, PRESSURE, PROCESSING CASE FRONT	4PB4047-3631P1	
85	SPRING, PROCESSING CASE, LOWER	4PB4047-3624P1	
86	LEVER, LOCK, TONER CARTRIDGE	4PB4047-3665P1	
87	SPRING, PRESSURE PROCESSING CASE REAR	4PB4047-3623P1	
88	HINGE, PROCESSING CASE	4PB4047-3622P1	
89	LOCKING LEVER	4PB4047-3666P1	
90	CLEANER, CH + TR	4PB4047-3743P1	
91	PLATE, GROUND, BIAS	4PB4047-3625P1	
92	RETAINING RING	4PB4047 3668P1	
93	PAPER LOAD LEVER	4PB4047-3642P1	
94	MANUAL FEED ASSY	4PB4047-3648P1	
95	CLEANER FEARING	4PB4047-3680P1	
96	DEVELOPM. UNIT DRIVE GEAR	4PB4047-3181P1	
97	SPRING	4PB4047-3684P1	